


MOTOSPEED



MOTOSPEED®

Owner's Reference

K84 RGB Mechanical Keyboard/Inflictor CK104

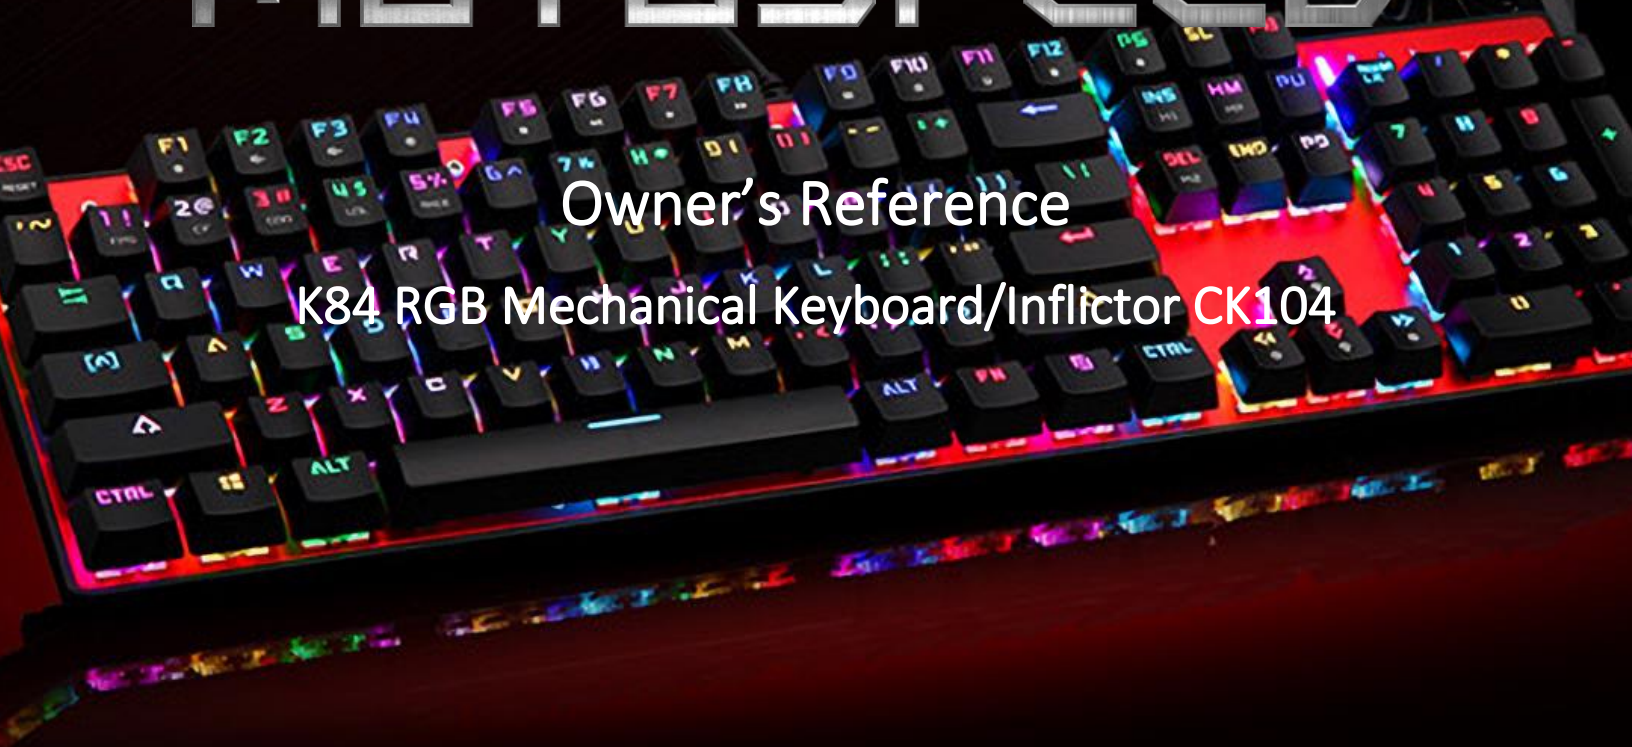

Multimedia Key Combinations:

FN + F1		CD
FN + F2		Decrease Volume
FN + F3		Increase Volume
FN + F4		Mute
FN + F5		Last
FN + F6		Next

FN + F7		Pause/Play
FN + F8		Stop
FN + F9		E-mail
FN + F10		Internet
FN + F11		My computer
FN + F12		Calculator

Keyboard Configuration Key Combinations:

FN + W	Interchange W A S D and ↑↓←→
FN + WIN-L	Lock WIN key.
FN + ↑	Brightness +
FN + ↓	Brightness –
FN + ←	Speed –
FN + →	Speed +
FN + INS	Switch LED Mode
FN + PrtScr	Turn off the backlight
FN + ESC	Restore to default settings – resets Selective Mode profiles
FN + DEL	Varies per Backlight Mode



Backlight Modes:

1. Full Backlight Mode	- Steady color and brightness
2. Breathing Mode	- Fades in and out
3. Selective Mode	- 5 Customizable preconfigured backlight profiles
4. Color Cycling Mode	- Cycles through color spectrum one at a time
5. Reactive Typing Mode	- Keys light up when pressed then fade out
6. Wave Mode	- Moving gradient effect from one side to other
7. Snake Marquee Mode	- Vertical zigzag lighting up one row at a time
8. Ripple Mode	- As name suggests; ripple effect like water
9. Circle Mode	- Circle lights up around pressed key
10. Rainbow Mode	- Cycles through color spectrum at once